

Instructions

Battery Life

In our highly technical bench test involving a stopwatch, a collection of favorite music and countless cups of tea we got more than 40 hours of play using a set of 900mAh rechargeable batteries. With higher capacity rechargeables, Alkaline or Lithium batteries you can expect longer life—but only if you switch the power off after each use. The Minty Blaster comes with a set of three AAA Alkaline batteries installed.

Changing the Batteries

When your music starts to clip it's time to change the batteries. Use the included "Battery Change Tool" to pry up the fabric covered baffle. Squeeze opposite corners of the tin together and you will see small gaps appear between the baffle and the corners of the tin. Insert the tool into the corner furthest from the switch and *gently* pry, wiggle and slide the baffle out. Use your thumbs to press the baffle back into place. It goes in with a satisfying snap.

Stereo In — Mixed Mono Out

Left & Right stereo signals are combined internally and transmitted equally through the single speaker. Any 3.5mm Aux Cable can be used to connect the Minty Blaster to your music player. Yep, you could shred the speaker if you play the volume too loud. If the sound distorts or your neighbors complain—turn the volume down. Volume control is located on your music player.

Outdoor Use & Cleaning

The Minty Blaster is not waterproof and should be kept dry. The speaker can be carefully wiped with a soft cotton cloth. A toothbrush works well for brushing small bits of lint from the fabric.

ENJOY IT!

www.MintyGear.com